



THE FIRST CONCERN WHEN HANDLING ANY FIREARM IS SAFETY. THE FAILURE TO DO SO MAY RESULT IN PROPERTY DAMAGE, SERIOUS BODILY INJURY OR EVEN DEATH.

NOTE: This safety & instruction manual should always accompany this firearm and be transferred with it upon change of ownership or when presented to another person. Barrel must be pointed in a safe direction. It is recommended that every person receive instruction from a competent firearms instructor before handling this or any other firearm. Know and obey all the firearm laws and regulations.

RESTRICT ACCESS: Firearms including the CAPRICORN 1911 BIGSHOT are potent weapons therefore it must be ensured that they are inaccessible to unauthorized person.

DISCLAIMER: Under no circumstances shall CAPRICORN ART WORKS PRIVATE LIMITED be responsible for incidental or consequential damages with respect to economic loss or injury to person or property due to negligence, improper use, failure to following instructions in this manual, unsafe handling, failure to maintain the pistol, unauthorized replacement of parts, disregard of statutory rules or laws or any other modification to the pistol. Failure to read these instructions and to follow these warnings may result in serious injury or death to you and others and damage to property.

IMPORTANT NOTICE: This firearm underwent rigorous testing, inspection, and packaging before leaving the factory. As we cannot control the firearm after it leaves our premises, it is imperative that you examine it at the time of purchase to confirm it is unloaded and free from damage.

TABLE OF CONTENTS

1.	FOREWORD	1
2.	TECHNICAL SPECIFICATIONS	2
3.	SAFETY RULES	3
4.	STORAGE	4
5.	TRANSPORTATION	5
6.	MAIN COMPONENTS	6
7.	FUNCTIONAL PRINCIPLES	7
8.	DISASSEMBLY	12
9.	CLEANING AND LUBRICATION	14
10.	ASSEMBLY	15
11.	CONTACT DETAILS	16

FOREWORD

The CAPRICORN 1911 BIGSHOT is a single-action, recoil operated, semi-automatic pistol, chambered for the incredibly powerful and accurate .45 ACP cartridge catering purpose-built accuracy fused with refine aesthetics.

The ‘CAPRICORN 1911’ features full steel slide with graded metal frame, 7+1 round detachable magazine, a single-action trigger, a manual safety, and standard front and rear sight.

The pistol has a barrel length of 128mm, an overall length of 218mm and a weight of 1150g (without magazine). The CAPRICORN 1911 BIGSHOT has a black finish and a textured grip for enhanced control and comfort.

The ‘CAPRICORN 1911 BIGSHOT’ is the result of research and development by Capricorn Art works Private Limited. The company aims to provide high- quality firearms to the Indian market.

Capricorn Art Works Private Limited has its manufacturing unit

at Aryans E-527 M.I.A. Road No.10, 2nd Phase Basni Jodhpur 342001 Rajasthan where it manufactures a range of firearms.

The ‘CAPRICORN 1911 BIGSHOT’ is meticulously engineered and elegantly finished to meet the needs of discerning users. Thank you for choosing Capricorn Art Works Private Limited, your trust inspires us to deliver only the best.

TECHNICAL SPECIFICATIONS	
Caliber	.45ACP
Type	Pistol
Firing System	Semi-Automatic
Length	218mm
Height	136mm
Width	38.5mm
Safety system	Safety lock, Hammer Safety, Half-Cock Safety, Beavertail Grip Safety
Weight (without magazine)	1150 g
Magazine Capacity	7+1
Barrel Length	128mm
Trigger Action	Single Action

SAFETY RULES

- Safety should be the first concern of every firearm owner in every situation.
- Always treat your firearm as loaded as such that it will fire if the trigger is pulled; so, handle it with care.
- Do not put your finger inside the trigger guard unless you intend to fire.
- Do not fire randomly in public places and into the sky because the bullet can travel in unpredictable directions with considerable velocity and can glance off from any surfaces like rocks or surface water causing unwanted injuries and damages to anyone or any property.
- Never lock a loaded firearm and never load a locked firearm.
- Before handling any firearm familiarize yourself with its working and never depend on its mechanical features alone.
- Do not consume intoxicants before or while shooting; make sure not to use the firearm in unstable mental or physical conditions.
- Always wear eye and ear protectors that are specified for firearm use.
- Know all the legal consequences of using the firearm.
- Before using your firearm ensure that there are no obstructions in the barrel like mud, water, snow or any other object causing dangerous increase in pressure

resulting in damage of your firearm and causing unwanted injuries to yourself and others.

- Always use the specified ammunition for your firearm.
- Do not disassemble, manipulate, adjust or change any of the internal components of your firearm resulting in improper functioning thus affecting the safety and reliability of your firearm.

STORAGE

- One of the most important rules of firearm safety is its safe and secure storage.
- Keep your firearm locked, unloaded and secure when not in use.
- Keep ammunition and the firearm in separate location.
- Always prevent your firearm from being stolen or being used by untrained or unqualified individuals.
- Do not assume a hiding place is a safe storage location and make sure to change the storage place of your firearm from time to time in order to maintain its inaccessibility from unauthorized persons.
- Always keep your firearm away from children.

TRANSPORTATION

- Safe and secure transportation of your firearm is solely your responsibility.
- Make sure your firearm is always unloaded and locked during transportation.
- Obey all the laws relating to the storage and transportation of firearms. Your local police department can furnish you with available information on storing and transporting a firearm thus preventing unauthorized access of your firearm by others.

MAIN COMPONENTS



1.	SLIDE (Including Front and Rear Sight)	2.	FRAME (Including Grips and Trigger System)
3.	BARREL BUSHING	4.	BARREL WITH LINK
5.	RECOIL SPRING	6.	RECOIL SPRING PLUG
7.	RECOIL SPRING GUIDE	8.	SLIDE STOPPER

FUNCTIONAL PRINCIPLES

- After firing the pressure developed by the combustion gas in the chamber recoils the slide and barrel assembly together. After a run of slide barrel assembly, the block falls and releases the slide letting it recoil while the barrel stops against the frame. Period of its rear-ward movement, the slide extract and ejects the fired cartridge case, cocks the hammer and compress the recoil spring, with the force of recoil spring tense, the slide then moves forward feeding the next cartridge from the magazine into the chamber and causing barrel- slide locking. The slide stays open after the last cartridge in the magazine has been fired and eject.
- CAPRICORN 1911 Pistol models have Grip Safety System. Shooting can be made if the user holds the grip and feels the grip safety by his or her hand.
- **CONTROL BEFORE USAGE**
Be sure that the chamber is empty and the barrel is free from dirt and obstructions (Picture1). If you do not intend to fire, keep your fingers off the trigger. This pistol has grip safety system that's why shooting cannot be made if the grip safety is not deactivated by holding the grip by the user, this system provides an extra safety to the pistol (Picture2).



PICTURE 1



Grip Safety

PICTURE 2

- **CONTROL AFTER USAGE**
Make sure that the pistol is unloaded and the barrel is free of dirt.

Also make sure that the magazine is empty (Picture 1, 3).



PICTURE 3



PICTURE 4

▪ **SLIDE AND FRAME CONTROL**

Release the magazine (Picture 4). Pull the slide all the way back (Picture 3). While drawing the slide back, check whether the slide moves easily on the body frame and cocks the hammer or not (Picture 5). Also check the grip safety is working or not when the hammer is cocked. If the hammer is cocked when you retract the slide, pull the trigger and check if the hammer de-cocks easily or not (Picture 6). Inserting an empty magazine and repeat the same action. The slide must stay locked and open position in rear (Picture 7).



PICTURE 5



PICTURE 6



- **TRIGGER AND SAFETY LOCK CONTROL**

After cocking the hammer, pull the trigger and check if the hammer strikes the firing pin appropriately or not. Make sure that the trigger does not operate when the pistol is at safety position (safety lever is up) (Picture 8). Also make sure that the grip safety is operating perfectly when the safety lock is down.

NOTE: THE SAFETY LOCK CAN BE AT SAFETY POSITION ONLY WHEN THE HAMMER IS COCKED THAT'S WHY THE SAFETY LOCK CANNOT BE USED IF THE HAMMER IS NOT COCKED.

Warning: Never assume that the firearm is unloaded and tamper with it. Never let the muzzle of a firearm point at any part of your body or at another person. This is specifically important when loading or unloading the firearm. Do not apply force to the pistol with any object while handling, cocking, disassembling or cleaning the pistol. The pistol must be controlled by an authorized gun expert in case of an extraordinary condition such as defect, breakdown or heavy drops.

- **PREPARING TO FIRE**

Make sure that the pistol is on a safety mode (Picture 9). Remove oil from the barrel by using cleaning rod and soft cloth. Check the pistol if it is operating excellent. Be sure that the magazine is housed correctly.

- **LOADING THE PISTOL**

Insert the loaded magazine to the pistol until the magazine release button is locked. Pull the slide fully back and release it carefully. Now, the pistol is loaded and cocked.

- **FIRING**

Make sure that the pistol is set at a safety position (Picture 9). This model pistols have single action shooting mechanism. Aim the pistol to the target, rotate the safety lock down (Picture10). When you are ready to fire while holding the grip for blocking the grip safety, pull the trigger and fire.

Warning: The pistol is still loaded, the hammer cocked and ready to be fired again, if you do not intend to fire, keep your fingers off the trigger.



PICTURE 9



PICTURE 10

- After last shooting, the slide will stop at the rear side of the pistol. It means that the magazine is empty.
For shooting again remove the empty magazine and insert the fully loaded magazine. Push the slide stop latch to reload the pistol.
- **UNLOADING THE PISTOL**
Press the magazine release button to remove the magazine from the pistol (Picture 4). Pull the slide fully back to extract the cartridge from the chamber (Picture1). When you are sure that the chamber is completely empty & the last cartridge is extracted, release the slide to move forward carefully.

DISASSEMBLY

- Remove the magazine by pressing the magazine release button (Picture 4).



PICTURE 11

- Place the pistol on a flat surface from the hammer side (Picture 11) and push the recoil spring plug below the barrel bushing from the right-hand thumb and rotate barrel bushing in the clockwise direction.
- Now remove the recoil spring plug, recoil spring, from the slide (Picture 12).



PICTURE 12

- Hold the pistol with the right hand.
- Pull the slide back until the small notch (second notch from the top of the slide) is at the same level where the Slide stops & hold the pistol at this position (Picture 13).



PICTURE 13



PICTURE 14

- Remove the Slide Stop by pressing the top of the Side Stop with index finger. Separate the Slide stop from the pistol (Picture 13).
- Hold the slide with the left hand & separate the slide from the frame (Picture 14).
- Remove the recoil spring guide which is located on the Barrel (Picture 14).
- Remove the barrel bushing from the slide by rotating it in anti-clockwise direction and then remove the barrel from the slide by pushing it in the forward direction.

After these serial operations the main components of the pistol are disassembled & disassembly process is completed.

CLEANING AND LUBRICATION

- Before cleaning check that the pistol is unloaded (magazine removed from pistol and chamber clear). Also ensure that the magazine is unloaded.
- Your firearm is a precision instrument. After each use of the pistol or after being subjected to extreme weather conditions, the pistol should be cleaned and lubricated.
- Also, before using the pistol for the first time, it should be examined and cleaned.
- Starting with the barrel and from chamber end, insert a brass brush/cloth through the bore of the barrel until the bristles completely exit at muzzle end.
- Pull the brush back until the bristles completely exit at chamber end.
- Remove any residue on the frame with light brushing.
- After cleaning, lightly coat the metal parts, internal and external with high-quality firearm oil.

ASSEMBLY



PICTURE 15



PICTURE 16

- Hold the slide from the left hand and place the barrel with barrel bushing in a slide (Picture 15).
- Now rotate the barrel bushing in anti-clockwise direction.
- Now keep the recoil spring guide on the barrel hold the pistol from the other hand and put the slide to the frame (Picture 16).
- And fix the slide stop. (Picture 17).



PICTURE 17



PICTURE 18



PICTURE 19



- Once the slide stop is fixed at its position put the recoil spring and recoil spring plug and lock it with barrel bushing. (Pictures 18 and 19)
- Now the pistol is fully assembled and ready to use.

BUYER INFORMATION

Serial No.: _____

Buyer Name: _____

Address: _____

Mobile Number: _____

License Number: _____

UIN: _____

Date of Sale: _____

Seller's Stamp & Signature

(Buyer's Signature)